


# Segundo North Thermostat User Guide

The Segundo North buildings are equipped with Johnson Controls thermostats. These thermostats control the temperature in the room based on pre-set limits. Residents can select comfortable heating/cooling temperatures within 3.5 degrees (on either side) of the standard set point by moving the slider towards red (heating) or blue (cooling).

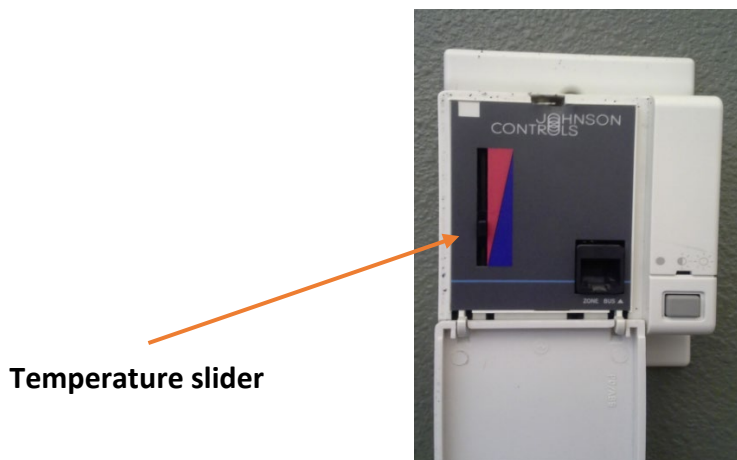

## Troubleshooting:

### Room is Too Hot

1. Look at the slider – is it all the way to the cold side (blue)?  
If not, slide the slider all the way to the blue side.
2. Are the windows open?
  - a. If outside temperatures are warmer than inside temperatures, close all windows to allow maximum efficiency.
  - b. If outside temperatures are cooler than inside temperatures, open windows to allow increased cooling.

### Room is Too Cold

1. Look at the slider – is it all the way to the heat side (red)?  
If not, slide the slider all the way to the red side.
2. Are the windows open?
  - a. If outside temperatures are cooler than inside temperatures, close all windows to allow maximum efficiency.
  - b. If outside temperatures are warmer than inside temperatures, open windows to allow increased warming.

If the above actions do not resolve the problem, please submit a request on-line.